

Key for Dino Spider 2400 Wiring Diagram

1. Side direction indicator light
2. Front parking and direction indication lights
3. Headlights for low beam (with halogen lamp)
4. Headlights for high beam (with halogen lamp)
5. Horn
6. Motor for radiator fan
7. Ignition distributor
8. Spark plugs
9. Alternator
10. Oil pressure switch for warning light 58
11. Oil pressure switch for fuel pump
12. Thermoelectric switch for motor 5
13. Motor compressor for trumpet horns
14. Ignition coil
15. Relay for trumpet horns, with anti-noise capacitor
16. Engine compartment light
17. Relay for motor 6
18. Voltage regulator
19. Pressure switch for engine compartment light
20. Thermoelectric switch for coolant thermometer; deflects the switch until scale end (excessive coolant temperature), regardless of the reading of temperature detector 26
21. Temperature detector for oil thermometer
22. Contactor for oil pressure gauge
23. Additional resistor for coolant thermometer
24. Temperature detector for coolant thermometer
25. Starter
26. Ignition control unit switch
27. Ignition control unit
28. Blow-out fuses
29. Contactor for warning light of activated parking brake
30. Relay for fuel pump
31. Charge control relay
32. Relay for simultaneous illumination of headlights 3 and 4
33. Pressure switch for stop light
34. Wiper motor
35. Windscreen wiper delay control
36. Actuator for direction indicator lights
37. Foot button for windscreen washer
38. Switch for heating/ventilation fan
39. Motor for heating/ventilation fan
40. Resistor
41. Socket for hand lamp
42. Interior light below dashboard with incorporated interior light switch
43. Pressure switch for warning light 51
44. Oil pressure gauge
45. Warning light (red) for insufficient oil pressure
46. Lamp for oil pressure gauge
47. Coolant thermometer
48. Lamp for coolant thermometer
49. Lamp for rev counter
50. Charge control lamp (red)
51. Warning light (orange) of the activated carburetor starting device
52. Warning light for activated parking brake (red flashing light) or worn brake lining at front wheels (red continuous light)
53. Rev counter
54. Indicator light for parking and rear light (green)
55. Indicator light for direction indicator light (green)
56. Indicator light for high beam headlights (blue)
57. Lamp for speedometer
58. Indicator light for low fuel level (red)
59. Lamp for fuel level indicator
60. Fuel level indicator
61. Oil thermometer
62. Lamp for oil thermometer
63. Adjustable resistor for wiper speed
64. Main switch for exterior lights
65. Clock
66. Lamp for clock
67. Horn selector
68. Switch with resistor for dashboard lights
69. Lamp in glove compartment
70. Pressure switch for lamp in glove compartment
71. Pressure switch for position lights at the doors
72. Pressure switch at the doors for interior lights
73. Position lights of the doors
74. Motor for left power window
75. Motor for right power window
76. Ignition and steering lock
77. Change-over switch of the headlights
78. Direction indicator switch lever
79. Switch lever for windscreen wiper
80. Horn button
81. Three-position switch for motor 74
82. Cigar lighter with lamp
83. Three-position switch for motor 75
84. Fuel level detector
85. Trunk light
86. Fuel pump
87. Pressure switch for trunk light
88. Pressure switch for reversing light
89. Pressure switch for warning light of the activated parking brake
90. Battery
91. Rear direction indication lights
92. Reversing light
93. Rear and stop light
94. License plate light